




Convertible "L1000 Crib™" Instruction Sheet

Read All Instructions Before Assembling Crib. Keep Instructions For Future Use.
Check Box For All Parts.


A PHILLIPS HEAD SCREWDRIVER IS REQUIRED

PARTS LIST

- (1) Back Frame
- (1) Front Frame
- (2) End Frames
- (2) Front Posts
- (1) Guard Rail
- (1) Youth Rail

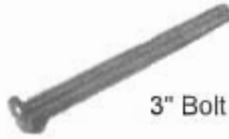

3" Bolt

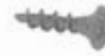

1" Screw



3/4" Bolt



Spring Washer



2-1/2" Bolt



Flat Washer



Allen Wrench

PARTS LIST (WITH ADULT CONVERSION)

- (2) Adult Rails
- (5) Cross Slats

HARDWARE LIST

- (4) 3" Bolts
- (8) 2-1/2" Bolts
- (8) 3/4" Bolts
- (16) Flat Washers
- (16) Spring Washers
- (10) 1" Screws
- (1) Allen Wrench
- (1) Spring (Mattress Support)



Back Frame



Front Frame



End Frame




Guard Rail




Youth Rail




Front Posts

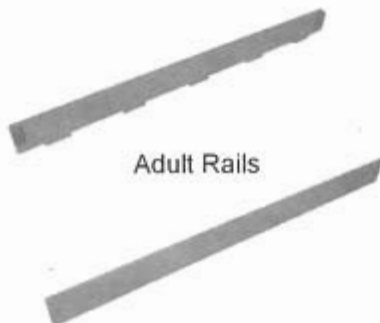

Adult Rails

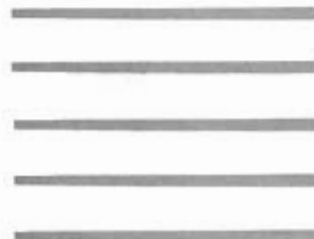

Cross Slats

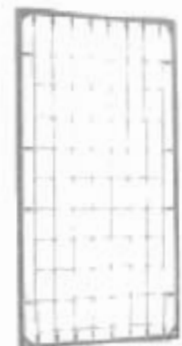

Mattress Support

CRIB ASSEMBLY INSTRUCTIONS

Step 1: Assemble the two End Frames to the Front and Back Frames will need eight 2-1/2"L Bolts, eight Spring Washers, eight Flat Washers and the Allen Wrench. The notched area of the upper end rail of the End Frame must be attached to the front of the crib. (See photo) Bolt the End Frames to the front and back assemblies using eight 2-1/2"L Bolts, eight Spring Washers, eight Flat Washers and the Allen Wrench. Tighten all bolts at this time.



Step 1



Step 2

Step 2: Attach the Mattress Support (Spring) to the crib. Decide which position you desire to mount the Mattress Support (Spring). To mount the spring you will need four 3/4"L Bolts, four Spring Washers, four Flat Washers and the Allen Wrench. Insert the 3/4"L Bolts through the holes in the spring arms and into the inserts located in the Front and Back Frames. Tighten using the Allen Wrench.

TODDLER BED CONVERSION (FROM CRIB)

Step 1: Remove the Front Frame from the crib by removing the four Bolts, four Spring Washers and four Flat Washers that attached it to the Front Frame. Remove the Mattress Support (Spring) from the Crib.



Step 1



Step 2
Step 3

Step 2: You must now attach the two front posts to the End Frame by using the four Bolts, four Spring Washers and four Flat Washers.

Step 3: Attach the Mattress Support (Spring) to the Toddler Bed. You will need four 3/4"L Bolts, four Spring Washers, four Flat Washers and the Allen Wrench. Insert the 3/4"L Bolts through the holes in the spring arms and into the located in the Front Frame and Front Posts. Tighten using the Allen Wrench. You must make sure that the Mattress Support (Spring) is in the lowest position.



Step 4

Step 4: Attach the Guard Rail to the Front Posts. Using four 3"L Bolt, four Spring Washers, four Flat Washers and Allen Wrench.

YOUTH BED CONVERSION (FROM CRIB)

Step 1: Remove the Front Frame from the crib by removing the four bolts, four spring washers and four flat washers that attached it to the Front Frame. Remove the Mattress Support (Spring) from the Crib.



Step 1



Step 2
Step 3

Step 2: You must now attach the two Front Posts to the End Frame by using the four Bolts, four Spring Washers and four Flat Washers.

Step 3: Attach the Mattress Support (Spring) to the Toddler Bed. You will need four 3/4"L Bolts, four Spring Washers, four Flat Washers and the Allen Wrench. Insert the 3/4"L Bolts through the holes in the spring arms and into the located in the Front Frame and Front Posts. Tighten using the Allen Wrench. You must make sure that the Mattress Support (Spring) is in the lowest position.


Step 4: Attach the Youth Rail to the Front Posts. Using two 3"L Bolt, two Spring Washers, two Flat Washers and Allen Wrench.



Step 4

ADULT BED CONVERSION (FROM CRIB)

Step 1: To convert to an adult full size bed from a crib you must remove Mattress Support (Spring) and the two End Frames.

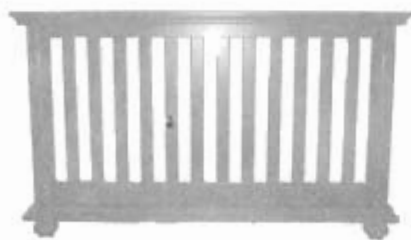

Step 2: The headboard and the footboard of the crib is the head board and footboard for the Adult Bed.

Step 3: To attach the wood side rails (packaged in the Adult Conversion) to the headboard and footboard you will need eight 3/4"L Bolts, eight Spring Washers, eight Flat Washers and your Allen Wrench. The cleated side of the Adult Rail must be mounted towards the top during assembly of the Adult Bed. (See photo) Insert the 3/4"L Bolt, Spring Washer and Flat Washer through the holes in the metal brackets and into the post of headboard and footboard. Tighten all bolts using your Allen Wrench. (See photo)



Step 4: Attach the five cross slats to the Adult Rails, you will need ten 1"L screw and your Philips Head screwdriver.

FOR FUTURE USE AND REFERENCE

RETAIN THIS INSTRUCTION SHEET AND THE CRIB TOOLS IN THE ORIGINAL SACK
AND SECURE IT TO THE SPRING UNDER THE MATTRESS WITH PLASTIC TIES.

CARE INSTRUCTIONS: The natural warmth of wood is a lasting value. Character marks, checking and grain variations are part of the beauty of wood and, therefore, should not be a concern. If treated with care, this solid wood product will last you for many years to come. Once every week, wipe your Cocoon furniture with Pledge®, lemon oil or other similar wood treatment products. If you encounter any roughness in the finish of your new crib, fold a piece of regular white paper—not tissue or newspaper—and rub it gently against the surface until the desired smoothness is achieved. If refinishing, use a non-toxic finish specified for children's products. Sand with a very fine product such as folded paper or dish washing sponge and, finally, apply water-based baby-safe lacquer for the perfect matching shine.

WARNING

To insure your child's safety and for your own peace of mind, be sure to follow instructions properly. Failure to follow these warnings and assembly instructions could serious result in injury or death. Before each usage or assembly, inspect the crib for damaged hardware, loose joints, missing parts or sharp edges.

- ✓ DO NOT use the crib if any parts are missing or broken.
- ✓ DO NOT substitute parts. Ask your dealer or write to Cocoon Furniture for replacement parts and instructional literature if needed.
- ✓ Make sure that all bolts and screws are properly tightened. DO NOT over- or under-tighten.
- ✓ AVOID STRANGULATION: As soon as an infant can sit or stand up, close the crib gate or raise the Drop Front permanently.
- ✓ DO NOT place the crib near a window where cords from blinds or drapes may strangle a child.
- ✓ DO NOT tie pacifiers, necklaces or any other items around a child's neck or on the crib parts.

WARNING

Strings can cause strangulation! Do not place items with string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a crib or attach string toys.

- ✓ NEVER use plastic shopping bags or other film as mattress covers, because they can cause suffocation.
- ✓ For a newborn, adjust the spring on the highest level of the Height Adjuster and open the gate or lower the Drop Front for easy access.
- ✓ DO NOT leave a child in a crib with an open gate or lowered Drop Front. Be sure the gate is closed or the Drop Front is raised and locked in position whenever the child is in the crib. After closing the gate or raising the Drop Front, make sure the latches are secure.
- ✓ The child must be seated at the rear of the crib when lowering or raising the gate or Drop Front.
- ✓ As your child grows, adjust the height of the spring down so that he/she cannot pull himself/herself out of the crib. When the child is able to pull to a standing position, set the mattress to the lowest position and remove bumper pads, large toys and other objects that could serve as steps for climbing out. When the child is able to climb out or reaches the height of 35" (90cm), the bed should no longer be used in the form of a crib. You can continue to use this crib as a youth or toddler bed for another 2 to 3 years by using the Youth Bed Conversion Kit.

ANY MATTRESS USED IN THIS CRIB MUST BE AT LEAST 27 $\frac{1}{4}$ " X 51 $\frac{5}{8}$ " WITH A THICKNESS NOT EXCEEDING 6". DO NOT USE A WATER MATTRESS WITH THIS CRIB.

This crib conforms to the applicable regulations promulgated by the Consumer Product Safety Commission.



This product may be covered by one or more of the following patents: D366,778; D366,970, 5,077,846 and other patents pending.



411 Industrial Blvd, Buena Vista, Georgia 31803

www.forevercocoon.com

